




RUST BUSTER

RB9925 Bed Bolt Kit 1982-1993 Chevy S10 & GMC Sonoma

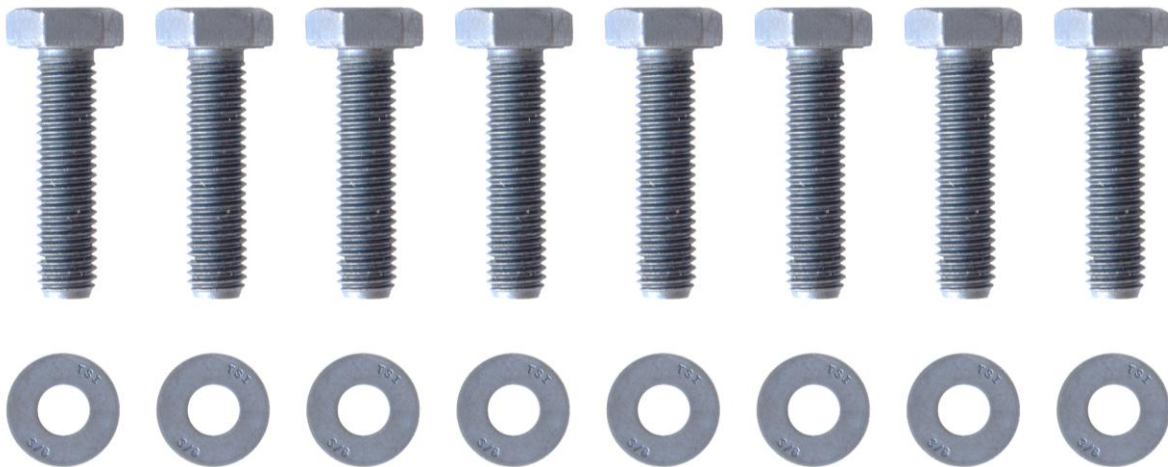

REQUIRED TOOLS

Jack Stands or Lift
Impact Gun or Ratchet
Anti-Seize
Help of a Friend
Fire Extinguisher

KIT CONTAINS

M10 Hex Head Screw
Flat Washer

QTY

8
8



RUST BUSTER

RB9925 Bed Bolt Kit 1982-1993 Chevy S10 & GMC Sonoma



WARNING!

If you are unsure on how to perform the installation or how to operate any of the required tools listed on the front page, it is **HIGHLY** advised that you enlist the work of a certified installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**

1) **PREPARING FOR YOUR INSTALL**

Use a 17mm socket with an impact gun or ratchet to remove the OEM bolts from your vehicle's bed.

2) **INSTALL YOUR BED BOLTS**

Glance underneath your bed and make sure the bolt holes are aligned.

Once aligned, coat the bolts with anti-seize. This will help seal and protect your bed bolts from seizing, corrosion, and galling.

Insert the included bolts and washers inside your bed.

Screw them into place using a 17mm socket with an impact gun or ratchet.